

## Product Information

### Healthcare

# **DOW CORNING® Class VI Elastomers (C6-530, C6-540, C6-550 C6-560, C6-570) Parts A & B**

---

## FEATURES

- Contains no peroxides, peroxide by-products, chlorophenyls or PCBs
- No organic plasticizers, phthalates or latex additives
- Solventless
- Non-blooming
- Can be post-cured
- Pigmentable

---

## BENEFITS

- Qualified to meet or exceed the test requirements of:
  - United States Pharmacopeia (USP) Class VI
  - European Pharmacopoeia (Ph. Eur. or EP ) Silicone Elastomers for Closures and Tubing-Substances soluble in hexane and Volatile matter
  - ISO 10993-1 Surface devices: cytotoxicity, sensitization and irritation/intracutaneous reactivity
- Fast cure system
- Easy processing
- Batch-to-batch consistency
- Cost-effective

---

## COMPOSITION

- Two-part silicone elastomer

## Liquid Silicone Rubber for device and component fabrication in the healthcare industry

### APPLICATIONS

- DOW CORNING Class VI Elastomers (C6-530, C6-540, C6-550, C6-560, C6-570) Parts A & B are platinum-catalyzed materials designed for part fabrication and medical devices, including those intended for implantation in humans for up to 29 days.

### DESCRIPTION

DOW CORNING Class VI Elastomers (C6-530, C6-540, C6-550, C6-560, C6-570) Parts A & B are a series of two-part platinum-catalyzed silicone elastomers. Each elastomer is supplied as a two-part kit (Part A and Part B), equal portions of which must be thoroughly blended together prior to use. The elastomer is thermally cured via an addition-cure (platinum-catalyzed) reaction. When blended and cured as indicated, the resulting elastomer consists of crosslinked dimethyl and methyl-vinyl siloxane copolymers and reinforcing silica. The elastomers are available in a range of nominal hardness from 30 to 70, Durometer-Shore A. The elastomers can be used without any post-cure although if necessary, this may be employed to stabilize final properties. Furthermore, the elastomers are heat stable up to 204°C (400°F), can be autoclaved, and exhibit high gas permeability compared with most thermoset elastomers and thermoplastics.

### HOW TO USE

These elastomers are supplied as two-component kits (Parts A and B) that must be thoroughly mixed in equal portions, by weight, prior to use.

Airless mixing, metering and dispensing equipment are recommended for production operations. Information is available from Dow Corning on the suppliers of suitable pumping, mixing, and molding equipment.

If hand mixing, a vacuum of 711 to 737mm Hg (28 to 29 inches of mercury) should be sufficient to de-air the material in 20 to 30 minutes. Use a container 3-4 times the volume of the mixture to allow for expansion.

### Cure

Cure of the mixed elastomer is accelerated by heat. Raising the temperature of the mixed material to 110°C (230°F) results in a rapid cure to a tough, elastomeric material. Cure profiles for these products can be found in Figures 1 and 2. Please note that mixing parts A & B at anything other than a 1:1 ration, by weight, will likely change the molding times, and the resulting material's properties. Text continuation

**CAUTION:** The cure may be inhibited by traces of amines, sulfur, nitrogen oxide, organotin compounds and carbon monoxide. Because organic rubbers often contain these substances, they should not come in contact with the uncured elastomer. Catalyst residues from some room temperature vulcanized and peroxide-cured silicone elastomers may also inhibit the cure.

### **Post-curing**

These materials crosslink via an addition-cure (platinum-catalyzed) reaction. No organic residues such as peroxides or their by-products are present and post-cure is not normally required for most applications. The user must confirm that quick molding or short oven cures are suitable for any specific application.

The principal volatile components evolved during post-curing are low molecular weight polydimethylsiloxanes and water vapor.

See Typical Properties chart (Table 1) for specific post-cure information.

### **QUALIFICATION TESTING**

The results of selected qualification tests are shown in Table 2. Summaries of Qualification Data are available upon request.

### **ORDERING AND PRODUCT INFORMATION**

For ordering and product information, contact your local Dow Corning Global Connection.

### **QUALITY ASSURANCE**

DOW CORNING Class VI materials are manufactured using appropriate principles of Good Manufacturing Practice (GMP) regulations.

Dow Corning is globally registered to the ISO 9001 Quality Standard. Registration certificate number FM 10734 has been obtained through the British Standards Institution (BSI). Certification to ISO 9001 through an independent third party indicates that Dow Corning operates a quality management system in accordance with the standard, ensuring full documentation and traceability.

### **REGULATORY STATUS**

DOW CORNING Class VI Elastomers, when fully cured and water rinsed, meet the requirements of FDA regulation 21CFR177.2600, "Rubber Articles Intended For Repeated Food Contact."

### **IMPORTANT INFORMATION**

#### ***THE USER'S ATTENTION IS IN PARTICULAR DRAWN TO THE FOLLOWING STATEMENT:***

*It is the User's responsibility to ensure the safety and efficacy of these materials for all intended uses. While these materials have passed screening tests that are applicable to products intended to be implanted for up to 29 days, Dow Corning makes no end-use representation based on such testing. These products are not designed for, tested for, intended for and therefore not suitable for implantation greater than 29 days in the human body.*

### **HANDLING PRECAUTIONS**

Product safety information required for safe use is not included. Before handling, read product and safety data sheets and container labels for safe use, physical and health hazard information. The material safety data sheet is available on the Dow Corning website at [www.dowcorning.com](http://www.dowcorning.com). You can also obtain a copy from your local Dow Corning sales representative or Distributor or by calling your local Dow Corning Global Connection.

### **USABLE LIFE AND STORAGE**

When stored at or below ambient temperature in the original unopened containers, these products have a usable life of 18 months from the date of production.

### **PACKAGING**

DOW CORNING Class VI Elastomers (C6-530, C6-540, C6-550, C6-560, C6-570) are supplied in 36kg and 400kg (80 lb and 900 lb) kits, containing equal portions each of Parts A and B.

### **HEALTH AND ENVIRONMENTAL INFORMATION**

To support Customers in their product safety needs, Dow Corning has an extensive Product Stewardship organization and a team of Product Safety and Regulatory Compliance (PS&RC) specialists available in each area.

For further information, please see our website, [www.dowcorning.com](http://www.dowcorning.com) or consult your local Dow Corning representative.

**LIMITED WARRANTY  
INFORMATION - PLEASE  
READ CAREFULLY**

The information contained herein is offered in good faith and is believed to be accurate. However, because conditions and methods of use of our products are beyond our control, this information should not be used in substitution for customer's tests to ensure that Dow Corning's products are safe, effective, and fully satisfactory for the intended end use. Suggestions of use shall not be taken as inducements to infringe any patent.

Dow Corning's sole warranty is that the product will meet the Dow Corning sales specifications in effect at the time of shipment.

Your exclusive remedy for breach of such warranty is limited to refund of purchase price or replacement of any product shown to be other than as warranted.


**DOW CORNING SPECIFICALLY  
DISCLAIMS ANY OTHER  
EXPRESS OR IMPLIED  
WARRANTY OF FITNESS FOR A  
PARTICULAR PURPOSE OR  
MERCHANTABILITY.**

**DOW CORNING DISCLAIMS  
LIABILITY FOR ANY  
INCIDENTAL OR  
CONSEQUENTIAL DAMAGES.**

*We help you invent the future.™*


**[www.dowcorning.com](http://www.dowcorning.com)**

Figure 1:

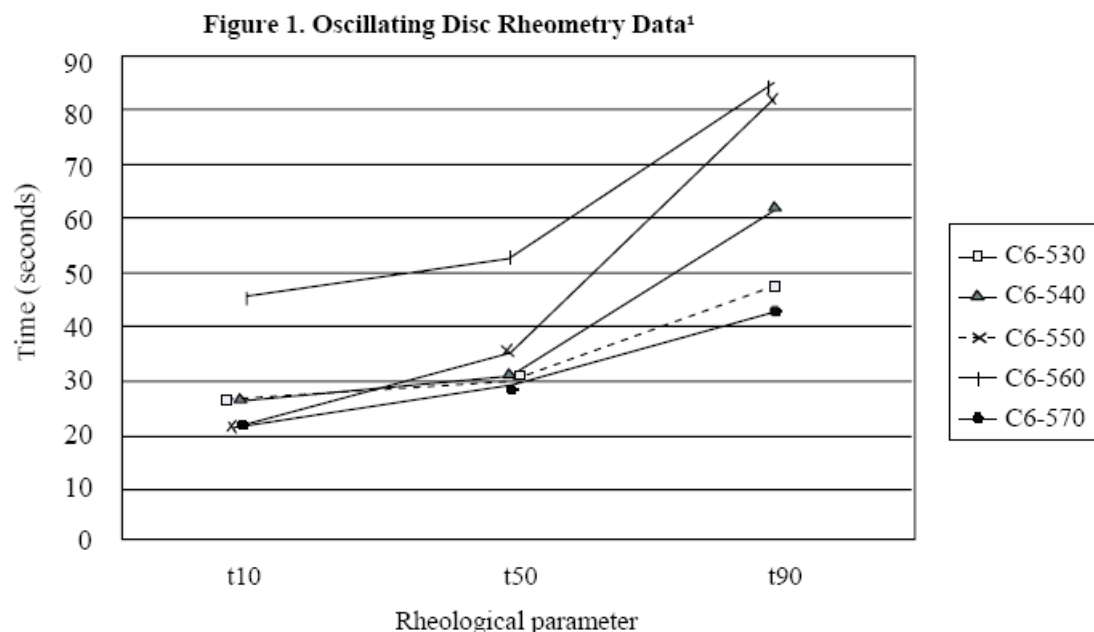

<sup>1</sup>Rheological properties measured with the Alpha Technologies Rheometer ODR 2000.  
Rheometer conditions: 116°C (240°F), 6-minute sweep time, 12.5 gram sample weight.

Figure 2:

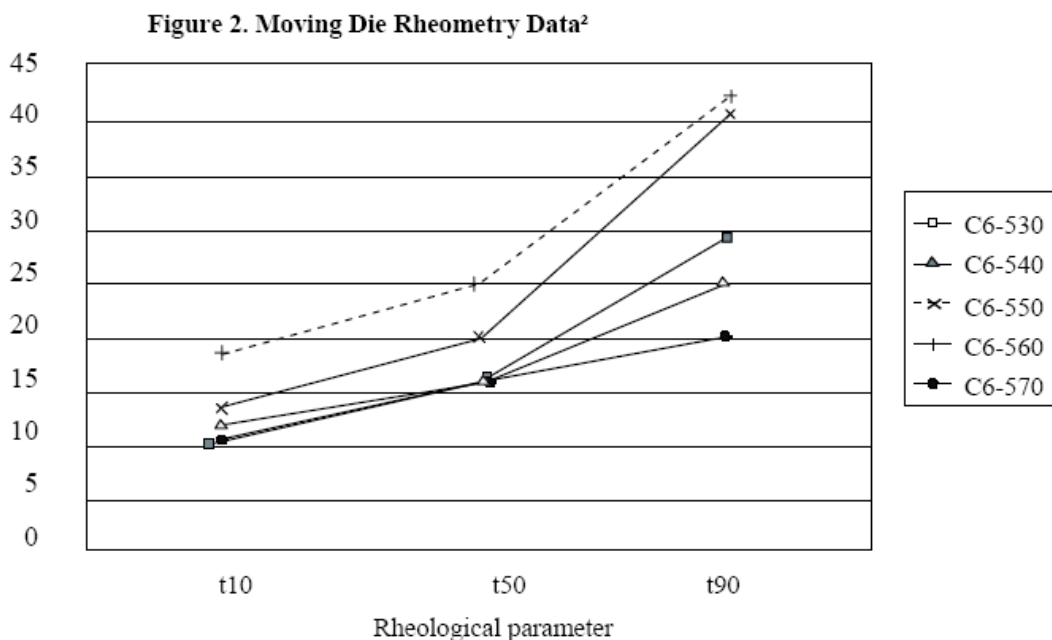

<sup>2</sup>Rheological properties measured with the Alpha Technologies Rheometer MDR 2000.  
Rheometer conditions: 116°C (240°F), 3-minute sweep time, 5.0 gram sample weight.

**Table 1: TYPICAL PROPERTIES<sup>1</sup>**

Specification writers: These values are not intended for use in preparing specifications. Please contact your local Dow Corning representative prior to writing specifications on this product.

CTM <sup>2</sup>	ASTM <sup>3</sup>	Test	Unit	C6-530	C6-540	C6-550	C6-560	C6-570
<b>No Post-cure</b>								
0022	D792	Relative density		1.13	1.13	1.14	1.10	1.15
0099	D2240	Durometer hardness, shore A		30	40	52	58	65
0137A	D412	Tensile strength	MPa	8.20	8.92	10.47	8.83	9.13
			psi	1190	1394	1518	1280	1324
0137A	D412	Elongation	%	831	742	661	540	442
0137A	D412	Modulus, 200%	MPa	0.89	2.12	3.20	3.97	5.24
			Psi	129	308	464	575	760
0159A	D624	Tear strength - Die B	kN/m	27.5	41.9	44.7	50.9	53.9
			ppi	157	239	255	290	308
1057		Shrinkage, linear	%	2.0	2.0	2.0	2.7	1.9
<b>Post-cured - 2 hours at 177°C (350°F)</b>								
0099	D2240	Durometer hardness, shore A		31	43	54	58	66
0137A	D412	Tensile strength	MPa	9.09	8.73	9.23	8.8	8.92
			psi	1318	1266	1339	1276	1294
0137A	D412	Elongation	%	833	642	530	503	380
0137A	D412	Modulus, 200%	MPa	1.15	2.70	3.92	4.27	5.78
			psi	167	391	569	619	839
0159A	D624	Tear strength - Die B	kN/m	28.2	45.0	49.0	47.5	49.4
			ppi	161	257	280	271	282
<b>Post-cured - 4 hours at 177°C (350°F)</b>								
0099	D2240	Durometer hardness, shore A		32	42	54	59	67
0137A	D412	Tensile strength	MPa	8.51	8.72	9.04	8.79	9.05
			psi	1235	1265	1311	1274	1313
0137A	D412	Elongation	%	793	659	522	518	394
0137A	D412	Modulus, 200%	MPa	1.05	2.48	3.92	4.21	5.67
			psi	152	359	569	610	823
0159A	D624	Tear strength - Die B	kN/m	26.3	44.8	48.2	49.5	49.7
			ppi	150	256	275	282	284
<b>Post-cured - 8 hours at 177°C (350°F)</b>								
0099	D2240	Durometer hardness, shore A		33	44	55	59	67
0137A	D412	Tensile strength	MPa	8.30	9.48	9.11	8.55	9.12
			psi	1204	1375	1322	1240	1323
0137A	D412	Elongation	%	796	660	508	492	386
0137A	D412	Modulus, 200%	MPa	1.10	2.85	4.12	4.29	5.83
			psi	160	413	598	622	846
0159A	D624	Tear strength - Die B	kN/m	27.0	45.7	49.9	50.7	50.3

1. Properties obtained from 1.905mm (0.075 inch) thick ASTM slab cured 5 minutes at 150°C (302°F) and allowed to equilibrate a minimum of 3 hours at ambient conditions.

2. Corporate test method (CTM) procedures correspond to standard ASTM tests in most instances. Copies of CTMs are available upon request.

3. ASTM: American Society for Testing and Materials.